



Getting to Know Your 2008 VUE



Table of Contents

DRIVER INFORMATION	Heated Seat Controls 7	Center Console Features 16
Instrument Panel 2	Climate Controls 8	Front Storage Compartment . . . 16
Instrument Panel Cluster 3	ENTERTAINMENT	Folding Passenger Seats 16
Driver Information Center 4	Audio System Features 9	Rear Seat Clothes Hooks 17
SAFETY & SECURITY	Multiple-Disc CD Player 11	Cargo Management System . . . 17
Saturn Security System/ Remote Keyless Entry 5	Touch Screen Navigation Entertainment System 11	Remote Vehicle Start 17
Entry and Exit Lighting 5	XM Satellite Radio 11	PERFORMANCE & MAINTENANCE
Liftgate Operation 5	Audio Steering Wheel Controls 12	TAPshift Manual Shift Mode . . . 18
Passenger Airbag Status Indicator 6	CONVENIENCE	Electronic Range Selection . . . 18
OnStar® 6	Automatic Headlamp System . . 12	StabiliTrak® – Stability Control System 18
COMFORT	Wipers and Washers 13	Tire Pressure Monitor 19
Manual Driver's Seat Adjustments 6	Universal Home Remote 14	Spare Tire 19
Power Driver's Seat Adjustments 7	Cruise Control 14	Resetting the Oil Life System . . 19
Steering Wheel Adjustment . . . 7	Power Windows 15	OWNER INFORMATION
Shoulder Belt Height Adjustment 7	Power Mirrors 15	Roadside Assistance 20
	Accessory Power Outlets 15	My Saturn 20


Congratulations on your purchase of a Saturn VUE. Please read this information and your Owner Manual to ensure an outstanding ownership experience. Note that your vehicle may not include all the features described in this booklet. Keep this booklet with your Owner Manual for easy reference.

DRIVER INFORMATION**Instrument Panel**

- | | | |
|--|---|-------------------------------------|
| A. Air Outlets | G. Hazard Warning
Flashers Button | N. Audio Steering Wheel
Controls |
| B. Exterior Lamps Control | H. Passenger Airbag
Status Indicator | O. Rear Wiper/Washer
Buttons |
| C. Turn Signal/Multifunction
Lever | I. Cardholder | P. Traction Control Button |
| D. Instrument Panel Cluster | J. Storage Area | Q. Climate Controls |
| E. Windshield Wipers Lever | K. Hood Release | R. Shift Lever |
| F. Audio System/Navigation
System (if equipped) | L. Tilt Wheel Lever | S. Glove Box |
| | M. Cruise Control
Buttons | |

See Section 3 of your Owner Manual.

Instrument Panel Cluster

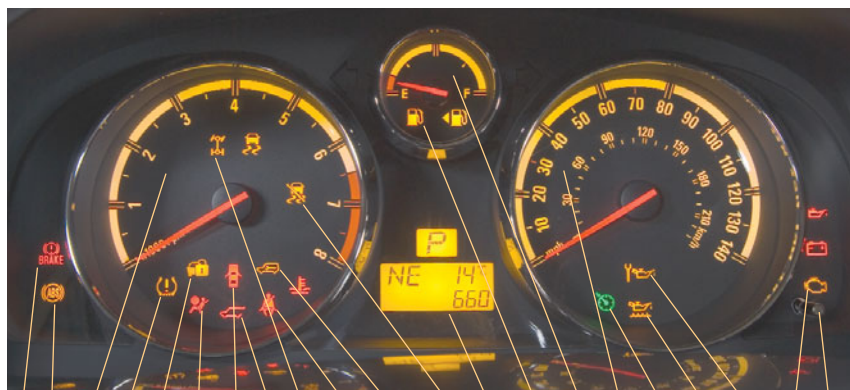

A B C D E F G H I J K L M N O P Q R S T U

Your vehicle's instrument panel is equipped with this cluster or one very similar to it. The instrument panel cluster includes these key features:

- A. Brake System Warning Light
- B. Antilock Brake System Warning Light
- C. Tachometer
- D. Tire Pressure Warning Light
- E. Security Light
- F. Airbag Readiness Light
- G. Door Ajar Light
- H. Liftgate Ajar Light
- I. All-Wheel Drive Warning Light
- J. Safety Belt Reminder Light
- K. Service Vehicle Soon Light
- L. StabiliTrak/Traction Control Off Light
- M. Driver Information Center
- N. Low Fuel Warning Light

- O. Fuel Gauge
- P. Speedometer
- Q. Cruise Control Set Light
- R. Low Oil Level Light
- S. Change Engine Oil Light
- T. Check Engine Light
- U. Trip Odometer Reset Button

Note: The instrument panel cluster is designed to let you know about many important aspects of your vehicle's operation. It is important to read your Owner Manual and become familiar with the information being relayed to you by the lights, gauges and indicators, as well as what action can be taken to ensure safety and to prevent damage.

See Section 3 of your Owner Manual.

Driver Information Center



Your vehicle's Driver Information Center (DIC) displays the odometer, trip odometers, outside air temperature, compass information, and shift lever position indicator. The DIC information is shown on the instrument panel cluster display.



To access DIC features, use the reset button located on the lower-right side of the instrument panel cluster.

Units

To change the outside air temperature from English to Metric, turn the reset button to the right or left until the unit changes. This also changes the units displayed in the navigation system (if equipped).

Odometer/Trip Odometers

Press and release the reset button to display the odometer, Trip A or Trip B. To reset a trip odometer, press and hold the reset button while the trip odometer is displayed.

Compass Variance

At times, such as during a long-distance cross-country trip, it may be necessary

to adjust for compass variance by resetting the compass zone through the DIC. See your Owner Manual for the proper adjustment procedure.

Compass Calibration

If C appears in the DIC display, the compass should be calibrated. Only calibrate the compass in a magnetically clean and safe location, such as an open parking lot.

To calibrate the compass:

1. Make sure the compass is set to the correct variance zone.
2. Press the reset button until the C starts flashing.
3. Drive the vehicle in tight circles at less than 5 mph to complete the calibration. When the calibration is complete, the vehicle heading (for example, N for North) will display instead of the C.

Warning Lights

The instrument panel cluster features a variety of vehicle warning lights (depending on optional equipment) that will illuminate if a problem is sensed in a vehicle system.

If you have a current OnStar subscription, and a warning light appears, you can press the OnStar button and speak to an OnStar Advisor. In many vehicles, OnStar Advisors can access certain diagnostic information and can tell you how serious the problem is and what you should do about it.

Note: Your vehicle's warning lights provide critical information that can prevent damage to your vehicle. Review your Owner Manual to become familiar with the information and the action required.

See Section 3 of your Owner Manual.

SAFETY & SECURITY

Saturn Security System/ Remote Keyless Entry


The Saturn Security System features a Remote Keyless Entry (RKE) transmitter (or key fob) that allows you to lock and unlock your vehicle and perform other functions while up to approximately 65 feet away from the vehicle (195 feet if equipped with Remote Vehicle Start).





RKE functions include:

(Remote Vehicle Start)

(if equipped): This feature can be used to start the engine from outside the vehicle. (See Remote Vehicle Start.)

 (**Lock**): Press this button to lock all the doors and liftgate.

 (**Unlock**): Press this button to unlock the driver's door. Press it again within five seconds to unlock all remaining doors.

 (**Vehicle Locator/Panic Alarm**): Press and release this button to locate your vehicle. The turn signal lamps will flash and the horn will sound three times.

Press and hold the button to activate the panic alarm. The turn signal lamps will flash and the horn will sound for 30 seconds. Press the button again or turn the ignition to On to cancel the alarm.

Note: When using the RKE transmitter, be sure there is nothing between you and the vehicle that could block the transmitter's signal. If the transmitter does not work in the normal range, it may be time to change the battery. The range of the transmitter also will vary from one location to another.

See *Section 2 of your Owner Manual*.

Entry and Exit Lighting

When entering the vehicle, press the Unlock button on the Remote Keyless Entry transmitter and the lamps inside the vehicle will illuminate for 20 seconds or until the ignition is turned on if the dome lamp switch is in the Automatic position.

When exiting the vehicle, the headlamps and reverse lamps will turn on to provide added illumination around the vehicle.

See *Section 3 of your Owner Manual*.

Liftgate Operation



To open the liftgate, press the touchpad on the liftgate handle to unlatch it; then pull up on the handle.

To close the liftgate, use the molded handles to pull down the liftgate; then push the liftgate closed.

See *Section 2 of your Owner Manual*.

Passenger Airbag Status Indicator

Your vehicle is equipped with a Passenger Sensing System located in the front passenger seat for the front passenger airbag. There also is a front passenger airbag status indicator located on the center of the instrument panel.

Note: It is recommended that children not be placed in the front passenger seat, even with the Passenger Sensing System. All children should be secured in a rear seat, including an infant riding in a rear-facing infant seat, a child riding in a forward-facing child seat or an older child riding in a booster seat.

See Sections 1 and 3 of your Owner Manual.

OnStar®

The OnStar system provides in-vehicle safety, security and phone services, available 24 hours a day, 7 days a week. These services are easily accessed through the three OnStar buttons in your vehicle.

OnStar-equipped vehicles also have the ability to deliver driving directions to you automatically using OnStar Turn-by-Turn Navigation. OnStar Advisors can send a planned route to your vehicle and, as you approach a turn, the directions play over your vehicle's speakers.

For more information about OnStar features, refer to the OnStar Owner's Guide and enclosed audio CD located in your glove box.

See Section 2 of your Owner Manual.

COMFORT

Manual Driver's Seat Adjustments (if equipped)

Seat Adjustment

Lift the bar located under the front of the seat to adjust the position of the seat fore or aft; then release the bar.

Seat Height Adjustment

The height adjustment lever is the front lever located on the outboard side of the seat. Ratchet the lever upward repeatedly to raise the seat or downward repeatedly to lower the seat.

Seatback Recline Adjustment

The recline adjustment lever is the rear lever located on the outboard side of the seat. Lift the lever and move the seatback to the desired position; then release the lever.


Lumbar Support Adjustment



The lumbar support knob is located on the inboard side of the seatback. To increase the amount of lumbar support, rotate the knob forward repeatedly. To decrease support, rotate the knob rearward repeatedly.

See Section 1 of your Owner Manual.

Power Driver's Seat Adjustments (if equipped)

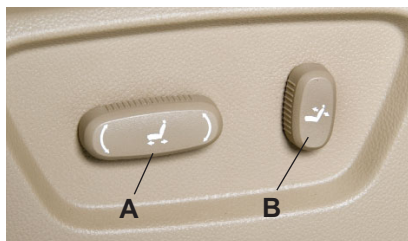

The power driver's seat controls are located on the outboard side of the seat.

Seat Adjustment

Use the horizontal control (A) to move the seat forward or rearward and to raise or lower the front or rear of the seat cushion.

Seatback Recline Adjustment

Use the vertical control (B) to recline or raise the seatback.

See Section 1 of your Owner Manual.

Steering Wheel Adjustment



To tilt the position of the steering wheel:

1. Push down the lever on the left side of the steering column.
2. Adjust the wheel to a comfortable position.

3. Pull up the lever to lock the wheel in place.

See Section 3 of your Owner Manual.

Shoulder Belt Height Adjustment

The shoulder belt can be adjusted to the height that is right for the driver and front passenger. Adjust the height so that the shoulder portion of the belt is centered on your shoulder.

To move the height adjuster up or down, squeeze the buttons on the sides of the height adjuster and move it to the desired position. Try to move the height adjuster without squeezing the buttons to make sure it has locked into position.

See Section 1 of your Owner Manual.

Heated Seat Controls



The heated seat controls are located on the front of the center console surrounding an accessory power outlet. To activate the driver's or front passenger's heated seat, press the button next to the desired seat. Continue to press the button to cycle through the temperature settings of High (three indicator lights), Medium (two indicator lights), Low (one indicator light) or Off (no indicator lights).

See Section 1 of your Owner Manual.

Climate Controls



Manual Operation

The climate controls include the following functions:

○ **(Off):** Turn the fan control knob to the Off position to turn off the system. Only the rear defogger will function when the system is off.

⚙️ **(Fan):** Turn this control knob (A) to increase or decrease fan speed.

☀️ **(Air Conditioning):** Press the fan control knob to turn the air conditioning system on or off.

Temperature Control: Turn this control knob (B) to increase or decrease the temperature setting.

↔️ **(Outside Air):** Press this button to allow outside air to circulate throughout the vehicle.

🗨️ **(Recirculation):** Press this button to recirculate inside air throughout the vehicle. This mode helps heat or cool the vehicle more quickly and prevents outside air and odors from entering the vehicle. The recirculation mode will operate only when the vent or bi-level airflow mode is selected.

Airflow Mode: Turn this control knob (C) to change the direction of the airflow to the vent, bi-level, floor, defog or defrost mode.

🌬️ **(Defog):** Select this mode to direct air to the windshield, side window outlets and floor outlets.

🌬️ **(Defrost):** Select this mode to direct most of the air to the windshield and some air to the side window and floor outlets.

🌬️ **(Rear Window Defogger):** Press the airflow mode control knob to turn the rear window defogger on or off. It will turn off automatically after a set period of time. This button also activates the heating of the windshield washer fluid (if equipped).

Automatic Operation (if equipped)

The automatic climate control system adjusts the airflow mode, fan speed, air conditioning and recirculation functions to reach the set temperature as quickly as possible.

To set the automatic system:

1. Turn the fan control and airflow mode control knobs to the AUTO position.
2. Set the temperature. Allow time for the system to reach the desired temperature.

See Section 3 of your Owner Manual.

ENTERTAINMENT

Audio System Features



While most of the features on your radio will look familiar, some of the following may be new:

⏻ (Power/Volume): Press this knob to turn the system on or off. Turn the knob to adjust the volume.

🎵 (Tune): Turn this knob to select radio stations or, when a CD is playing, to select a track or MP3 file.

i (Information): Press this button to display additional information related to the current FM-RDS or XM station, or MP3 song.

Tone and Speaker Control: Press the 🎵 (Tune) knob to adjust the tone control (bass/treble) or speaker control (balance/fade) setting. Turn the knob or press the SEEK, FWD or REV button to adjust the selected setting.

FAV (Favorite): Press this button to go through up to six pages of any combination (AM, FM, or XM, if equipped) of preset favorite radio stations. On each page, up to six stations are available by using the six pushbuttons below the radio display.

BAND: Press this button to switch to FM, AM, or XM (if equipped). When playing a CD or portable audio player, press this button to play the radio instead.

CD/AUX: Press this button to play a CD instead of the radio. Press again and the system will automatically search for a portable audio player connected to the auxiliary input jack.

EQ (Equalization): Press this button to select preset equalization settings.

CAT (Category) (if equipped): Press this button to find XM stations within a desired category.

Auxiliary Input Jack: A portable audio player (such as an iPod® or MP3 player) can be connected to the auxiliary input jack located on the radio. Press the CD/AUX button to begin playing audio from the portable player over the vehicle speakers. To optimize speaker volume, fully increase the volume on your portable player.

Setting Favorite Stations

Before setting your favorite stations, shift the vehicle into Park.

Note: Engaging in extended searching for specific audio stations or songs by using buttons and knobs — or giving extended attention to entertainment tasks — can lead you to look away from the road frequently or for prolonged periods, which may cause you to miss seeing things on the road that you need to see. Avoid engaging in extended searching for specific items while driving.

You can set up to six pages of any combination (AM, FM, or XM, if equipped) of favorite radio stations, with up to six stations stored on each page.



To set the number of favorite station pages:

1. Press the MENU button to display the radio setup menu.
2. Press the pushbutton located below the FAV 1–6 label on the radio display.
3. Select the desired number of favorite station pages.
4. Press the FAV button. You may now begin storing your favorite stations for the chosen number of pages.

To store favorite stations:

1. Tune in the desired radio station.
2. Press the FAV button to display the page where the station is to be stored.
3. Press and hold one of the six pushbuttons until a beep sounds to store the station.
4. Repeat the steps for each pushbutton on each page.

Setting the Time



To set the time:

1. Turn on the radio.

2. Press the \odot (Clock) button. Or, if equipped, press the MENU button until the clock option is displayed; and then press the pushbutton located under the clock option label. The HR, MIN, MM, DD, YYYY labels will appear on the display.
3. Press the pushbutton under any of the labels to be changed.
4. Press the pushbutton again, the right SEEK arrow or the FWD button to increase the numbers. Press the left SEEK arrow or the REV button to decrease the numbers. Rotating the ♪ (Tune) knob also will increase or decrease the numbers of the selected label.
5. Press the Clock or MENU button again to set the currently displayed time and date.

Playing MP3 Files

Your audio system has MP3 file playback capability. A CD-R containing MP3 audio tracks will play automatically when inserted into the CD player. An MP3 label will be displayed.

Radio Data System

When you tune to a Radio Data System (RDS) station, the station name or call letters will appear on the display instead of the frequency. Depending on the RDS station, additional text information may be available by pressing the **i** (Information) button.




RDS features are available for use only on FM stations that broadcast RDS information. RDS relies on receiving specific information from these stations and will work only when the information is available.

See Section 3 of your Owner Manual.

Multiple-Disc CD Player (if equipped)





To load a CD(s):

- Press and release the LOAD  button to load one CD. Press and hold the LOAD  button for two seconds to load multiple CDs. Follow the display prompts to load each CD. Press the LOAD  button again to cancel loading more CDs.

To play a specific CD:

- Press the pushbutton below the arrow label on the display to select the desired CD number.

To eject a CD(s):

- Press the  EJECT button once to eject the CD that is currently playing. Press and hold the  EJECT button to eject all CDs.

If a CD is not removed after several seconds, it will be pulled back into the player automatically.

Note: CDs with any affixed labels may jam in the CD player. Label a CD using a permanent marker. If more than one CD is inserted into the slot at one time, or if scratched or damaged CDs are played, the CD player could be damaged. When using the CD player, use only CDs in good condition without labels; load one CD at a time; and keep the CD player and the loading slot free of foreign materials, liquids or debris.

Refer to the Audio System Features section for information about the radio features of the multiple-disc CD player.

See **Section 3** of your Owner Manual.

Touch Screen Navigation Entertainment System (if equipped)



Your vehicle's Navigation Entertainment System provides you with detailed maps of all major highways and roads throughout the United States. The system provides turn-by-turn driving instructions for each destination you enter and can help you locate a variety of points of interest, such as banks, airports and restaurants. In addition, the system offers a variety of enhanced audio features.

Refer to your Navigation Entertainment System Owner Manual for operating instructions.

See **Section 3** of your Owner Manual.

XM Satellite Radio


XM Satellite Radio offers more than 170 channels of digital-quality sound that goes wherever you go — coast to coast. XM can display song title, artist or entertainment genre by pressing the **i** (Information) button.

After a free three-month trial period, activation and service subscription fees apply. Service is based in the continental U.S. and Canada. For more information, visit XM online at www.XMradio.com or call 1-800-852-XXMM (9696).

See Section 3 of your Owner Manual.

Audio Steering Wheel Controls

The following audio controls are located on the right side of the steering wheel:

 **(Volume):** Rotate the switch to increase or decrease the volume.



Press the switch to mute the vehicle speakers. Press it again to turn the sound back on. Press and hold the switch to initiate navigation system voice recognition or to interact with the OnStar system.

+ – (Next/Previous): Press the plus or minus button to go to the next or previous preset radio station or, when a CD is playing, to the next or previous track.

Press the minus button to also end a Hands-Free call or an OnStar call, cancel an incoming call, or end the OnStar Advisory playback.

See Section 3 of your Owner Manual.

CONVENIENCE

Automatic Headlamp System



The Automatic Headlamp System turns on the Daytime Running Lamps in the daytime and the headlamps and other exterior lamps at night or when necessary.


The system uses a light sensor, located on top of the instrument panel, to determine light conditions. For proper operation, avoid placing any objects on or near the sensor.

Exterior Lamps Control

 
The exterior lamps can be operated using the control knob located on the left side of the instrument panel. The knob can be rotated to the following positions:


AUTO (Automatic Lamp Control):

This position enables the Automatic Headlamp System.

 **(Off):** Turn the knob to this position to turn off the exterior lamps.

 **(Parking Lamps):** This position turns on the parking lamps and taillamps.

  **(Headlamps):** This position turns on the headlamps, parking lamps and taillamps.

 **(Fog Lamps) (if equipped):** Press this button next to the exterior lamps control knob to turn the fog lamps on or off.


See Section 3 of your Owner Manual.


Wipers and Washers


Windshield Wipers and Washer




The windshield wipers and washer lever, located on the right side of the steering column, includes the following functions:


 **(Mist):** Pull down and release the lever for a single wipe. Hold down the lever for additional wipes.


 **(Off):** Move the lever to this position to turn off the wipers.

 **(Intermittent):** Move the lever to this position to set a delay between wipes. Move the switch on top of the lever to adjust the delay. The wipers activate more often as the switch is moved toward the right.


If equipped with Rainsense™ II windshield wipers, this position activates the automatic wipers. Move the switch on top of the lever to adjust the sensitivity of the rain sensor.

 **(Low):** Move the lever to this position for steady wipes.

 **(High):** Move the lever to this position for rapid wipes.

 **(Washer Fluid):** Pull the lever toward you to spray washer fluid on the windshield.


Heated Washer Fluid (if equipped)


Press the  Rear Window Defogger button on the climate controls to activate the heating of the windshield washer fluid. The heated washer fluid will help clear ice, tree sap or bugs from the windshield. It may take up to 40 seconds to heat the washer fluid.

Rear Wiper and Washer



The rear wiper and washer buttons, located on the center of the instrument panel, include the following functions:

 **(Rear Wiper):** Press this button to turn the delayed wiping on or off.

 **(Washer):** Press this button to wash and wipe the rear window.

See Section 3 of your Owner Manual.

Universal Home Remote

The Universal Home Remote is a combined universal transmitter and receiver that can activate up to three devices, such as garage door openers, entry door locks and security systems.

It's recommended that you read the instructions in your Owner Manual completely before attempting to program any of the three channels on the Universal Home Remote. The engine should be turned off when programming the remote.

Note: Do not use the Universal Home Remote with any garage door opener that does not have the "stop and reverse" feature or any opener manufactured before April 1, 1982.

See Section 2 of your Owner Manual.


Cruise Control



The cruise control buttons are located on the left side of the steering wheel. They include the following functions:

Ⓢ (On/Off): Press this button to turn the cruise control system on or off.


SET – (Set): Rotate the switch down to set a speed. If the system is active, rotate the switch down to decrease speed 1 mph, or rotate and hold the switch down to decrease speed more than 1 mph.

When the cruise control is set, the  (Cruise Control) symbol will illuminate in the instrument panel cluster.

RES+ (Resume): Rotate the switch up to resume a set speed. If the system is active, rotate the switch up to increase speed 1 mph, or rotate and hold the switch up to increase speed more than 1 mph.

See Section 3 of your Owner Manual.

Power Windows

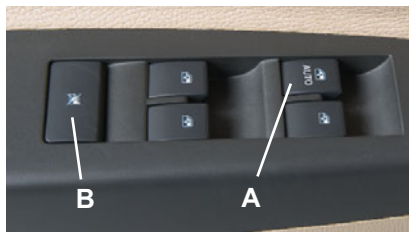

The power window switches are located on the driver's door armrest. In addition, each passenger door has a switch for its own window.

Driver's Express-Down Window


The driver's express-down window switch is marked AUTO (A). To operate the express-down window:

- Press down completely on the switch and the driver's window will lower automatically.
- Press down partway on the switch and the window will lower a small amount.

To stop the window, pull or press the switch momentarily.

To raise the window, pull up on the switch.

Window Lockout

Press the  (Window Lockout) switch (B) to prevent rear passengers from operating the rear windows. Press the switch again to turn off the lockout feature.

See *Section 2 of your Owner Manual*.

Power Mirrors



The outside power mirror control knob is located on the driver's door armrest. To adjust a power mirror:

1. Select the outside mirror to be adjusted by rotating the knob to the left (L) for the driver-side mirror or to the right (R) for the passenger-side mirror.
2. Move the control knob in the direction you wish to adjust the mirror.
3. After adjustment, rotate the control knob to the center position so the mirrors cannot be moved.

See *Section 2 of your Owner Manual*.

Accessory Power Outlets

Accessory power outlets are located on the front and rear of the center console, and in the rear cargo compartment.

See *Section 3 of your Owner Manual*.

Center Console Features



The center console features an upper, lower, and rear storage area.

To access the upper storage area, lift up the top lever (A) on the front of the console. To access the lower storage area, lift up the bottom lever (B) on the front of the console. To access the rear storage area, push the top button on the rear of the console.

To extend top of the console, lift the top lever (A) and slide the console lid to a comfortable position.

See Section 2 of your Owner Manual.

Front Storage Compartment



To access the storage compartment located under the front passenger's seat, lift up the end of the tray and slide it forward.

See Section 2 of your Owner Manual.

Folding Passenger Seats

The front passenger seatback and rear passenger seatbacks can be folded forward for more cargo space or can be reclined for greater passenger comfort.

Fold the Front Seatback

To fold down the front seatback:

1. Lower the head restraint and slide the seat to its rearmost position.
2. Lift the recline lever on the outboard side of the seat and fold the seatback forward and down.

Fold the Rear Seatback



To fold down the rear seatback:

1. Make sure all three of the safety belts are unbuckled and the front seatbacks are not reclined.
2. Lift the lever located on top of the seatback.
3. Fold the seatback forward and down.

Recline the Rear Seatback

To recline the rear seatback:

1. Lift and hold the lever located on top of the seatback.
2. Tilt the seatback rearward to the desired position; then release the lever.

See Section 1 of your Owner Manual.

Rear Seat Clothes Hooks

For your convenience, two clothes hooks are located on the ceiling of the rear seat area, near the ceiling-mounted assist handles.

Cargo Management System (if equipped)

The cargo management system uses a partition net and two guide rails in the rear cargo area side walls to help secure cargo.

To use the partition net, insert an adapter in each rail. Begin by folding the handle up and inserting the adapter in the upper and lower rails. Lock the adapter by turning it clockwise. Compress the rods of the partition net slightly and insert them into the corresponding openings of the adapter. The longer rod must be inserted in the upper adapter.

See *Section 2 of your Owner Manual*.

Remote Vehicle Start (if equipped)



This feature allows you to start the engine from outside the vehicle by using the Remote Keyless Entry (RKE) transmitter.

Based on outside temperature, the vehicle's automatic climate control system (if equipped) will default to a heating or cooling mode or the manual climate control system will operate at the same setting as when the vehicle was last turned off.



Starting the Vehicle

To remote-start the vehicle:

1. Aim the RKE transmitter at the vehicle. (Transmitter range is within approximately 195 feet of the vehicle.)
2. Press and release the  (Lock) button on the transmitter.
3. Immediately press and hold the  (Remote Start) button for at least two seconds. When the vehicle starts, the parking lamps will light and remain on while the engine is running. The engine will continue running for 10 minutes.


Note: The Remote Vehicle Start feature will not operate if the key is in the ignition, the hood is open, or the Check Engine light is illuminated on the instrument panel cluster.

4. Repeat these steps for a 10-minute time extension. Only two consecutive remote starts are allowed.

When you enter the vehicle after a remote start, the ignition must be turned to the On position before driving.

Canceling a Remote Start

If you wish to turn off the engine instead of driving after a remote start, perform one of the following functions:

- Press and hold the  (Remote Start) button until the parking lamps turn off.
- Press and release the Hazard Warning Flashers button. Press it again to turn off the flashers.
- Turn the key in the ignition switch to the On position and then off.

See *Section 2 of your Owner Manual*

PERFORMANCE & MAINTENANCE

TAPshift Manual Shift Mode (if equipped)

The 6-speed automatic transmission has a TAPshift manual shift mode that allows you to shift gears similar to a manual transmission. When using this feature the vehicle will have firmer shifting and sportier performance. It also can be used to downshift when driving on downhill grades to provide engine braking.



To use this feature, move the shift lever over to the manual shift mode position. The display on the instrument panel cluster will show the current gear selection.

To change gears, tap up the shift lever toward the + (plus) sign to upshift or tap down the shift lever toward the – (minus) sign to downshift. If current vehicle speed is too high or too low for the requested gear, the shift will not occur.

While driving in the manual shift mode, the transmission will remain in the driver-selected gear except when coming to a stop, during which the transmission will automatically shift to 1st gear.

See Section 2 of your Owner Manual.

Electronic Range Selection (Base Automatic Transmission)

Electronic Range Selection (ERS) enables the driver to select the top gear limit desired for the current driving conditions, such as when driving on downhill grades.

To use this feature, move the shift lever to the Manual (M) position and select the top gear limit of the transmission by selecting a lower or higher driving gear using the + / – button on the side of the shift lever. The current top gear limit will be shown on the instrument panel cluster.


If current vehicle speed is too high or too low for the requested gear, the shift will not occur. The transmission will be limited to the gear selected and lower gears.

See Section 2 of your Owner Manual.

StabiliTrak® – Stability Control System


StabiliTrak is an advanced computer-controlled vehicle stability and traction enhancement system that assists with directional control of the vehicle in difficult driving conditions. It turns on automatically every time you start your vehicle.

To limit wheelspin and help maintain directional control, you should always leave the system on. However, if your vehicle becomes stuck and rocking the vehicle is required, the system should be turned off.

To turn off the traction control part of the system, press the  (StabiliTrak/Traction Control) button




located on the center of the instrument panel. To turn off both traction control and StabiliTrak, press and hold the button. Press the button again to turn on both systems.

When either system is turned off, the  (StabiliTrak/Traction Control Off) light will illuminate.

See *Section 4 of your Owner Manual*.

Tire Pressure Monitor

The Tire Pressure Monitor alerts you when a significant reduction in pressure occurs in one or more of your vehicle's tires by illuminating the  (Low Tire Pressure) warning light on the instrument panel. The low tire pressure warning light will remain on until you correct the tire pressure.

Correcting the Tire Pressure

When the low tire pressure warning light illuminates, you must inflate the tire to the proper tire pressure. The Tire and Loading Information label, located on the center pillar below the driver's door latch, shows the correct tire pressure for the tires when they're cold. "Cold" means your vehicle has been sitting for at least three hours or driven no more than one mile.

During cooler conditions, the low tire pressure warning light may appear when the vehicle is first started and then turn off as you drive. This may be an early indicator that your tire pressures are getting low and the tires need to be inflated to the proper pressure.


Note: The Tire Pressure Monitor can alert you about low tire pressure, but it doesn't replace normal monthly tire maintenance.

See *Section 5 of your Owner Manual*.

Spare Tire

The compact spare tire and tools are located under the cargo load floor.


For access, slide the levers on the load floor to unlock the floor cover. Lift the floor cover, unsnap the hook under the floor cover handle, and hang the hook (A) to the liftgate opening.

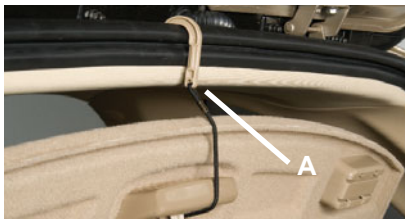

The compact spare tire is made to perform well at speeds up to 50 mph. It's best to replace the compact spare tire with a full-size tire as soon as possible.

See *Section 5 of your Owner Manual*

Resetting the Oil Life System

The Oil Life System calculates engine oil life based on vehicle use and illuminates the  (Change Engine Oil) light in the instrument panel cluster when it's necessary to change the engine oil and filter. The Oil Life System should be reset to 100% only following an oil change.

To reset the Oil Life System:

1. Turn on the ignition, with the engine off.
2. Fully press and release the accelerator pedal slowly three times within five seconds.
3. Turn off the ignition.

See *Section 5 of your Owner Manual*.

OWNER INFORMATION

Roadside Assistance

1-800-553-6000

TTY Users: 1-888-889-2438

As the proud owner of a new Saturn, you are automatically enrolled in the Saturn Roadside Assistance program. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

Saturn's Roadside Assistance toll-free number is staffed by a team of technically trained advisors who are available 24 hours a day, 365 days a year, to provide minor repair information or make arrangements to tow your vehicle to the nearest Saturn retailer.

Saturn will provide the following services for 5 years/100,000 miles at no expense to you:

- Fuel delivery
- Lockout service (identification required)
- Tow to nearest dealer for warranty service
- Flat tire assistance
- Jump starts

In many instances, mechanical failures are covered under Saturn's comprehensive warranty. However, when other services are utilized, our advisors will explain any payment obligations you might incur.

For prompt and efficient assistance when calling, please provide the following information to the advisor:

- Location of the vehicle
- Telephone number and your location
- Vehicle model, year and color
- Vehicle mileage
- Vehicle Identification Number (VIN)
- Vehicle license plate number

Saturn reserves the right to limit services or reimbursement to an owner or driver when, in Saturn's judgment, the claims become excessive in frequency or type of occurrence.

Roadside Assistance and OnStar (if equipped)

If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

My Saturn

The complimentary My Saturn owners website is a one-stop resource to enhance your Saturn ownership experience. Exclusive owner benefits include online vehicle maintenance schedules, service reminders, frequently asked questions, retailer information and more. Visit My Saturn today at Saturn.com and enjoy the ride.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice. © 2007 by GM Corp. All rights reserved.



15863776 C